



Item	Description
1	Motor
2	Adaptor plate
3	Adaptor plate screws
4	Flanged adaptor bolts
5	Flanged adaptor
7	Clamp ring
8	Clamp ring handle and washer
13	Shaft clamp
14	Stub shaft
15	Shaft guard
16	Housing plate

Item	Description
17	Cover joint ring
18	Cover
19	Impeller back plate (where fitted)
20	Impeller vane plate
21	Impeller key
22	Impeller lock nut
23	Flush connectors
40	Impeller joint ring
43	Cartridge
44	Cartridge screws