

See the pump / strainer instruction manual, for instructions on dismantling the pump / strainer.



The 'O' ring cord has been supplied to a specific length which is longer than the 'O' ring groove. Do NOT cut back the length of cord.

- 1) As appropriate, remove the pump cover from the pump / lid from the 'AS' vessel / lid from the strainer.
- 2) Push the one end of the cord into the groove at the 12 o'clock position.
- 3) Push the other end of the cord into the groove and tightly butt the two ends together. See photo 1.
- 4) Take the loop of cord and push it into the groove at the 6 o'clock position. The remaining 2 loops of cord should be approximately even each side.
- 5) Push the cord into the groove at the 3 o'clock and 9 o'clock positions. Again the cord should be even either side of the pushed in sections.
- 6) Now push the cord into the groove at each protruding loop until the cord is fully located.
- 7) The cord may appear slightly uneven in the groove, see photo 2.

Photo 1: Butt the two ends together

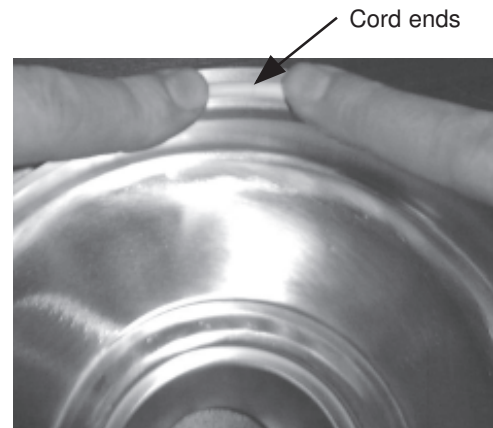


Photo 2: The cord may appear uneven

